

Igniter Installation Instructions

1. Disconnect power source by unplugging stove from wall receptacle.
2. Open the right side access door - side with controls.
3. Disconnect the igniter wire connections from the control board.
4. Open the left side access door - side without controls.
5. Loosen set screw in igniter tube.
6. Pull igniter out of tube.
7. Loosen set screw on igniter collar.
8. Remove collar from defective igniter.
9. Slide collar on new igniter.
10. Collar should be flush with end of igniter.
11. Slide igniter in tube. Ensure that it is centered in igniter tube.
12. You should be able to touch the igniter in the end of the tube.
13. Ensure that the air hole in the igniter tube is not blocked or plugged.
14. Tighten set screw in igniter tube.
15. Connect wires.
16. It is very important that the igniter does not touch side of igniter tube. If this does happen, the new igniter will short out.
17. Close access door.
18. Plug stove in.